

Install and install the product Please read this installation manual carefully

Please keep this manual properly

Installation Precautions

- Before installing the tailgate, check the status of the original tailgate (the door gap is stable)
- Check the appearance of the vehicle before installation to take pictures of the scratches and inform the owner
- After the product is installed, it is necessary to perform tailgate learning to work properly.
- All the pictures in this manual are for reference only. Pictures and objects may differ, but the installation method is the same.
- In order to facilitate your installation, please read the instruction manual of the product carefully before installation; care should be taken to protect the surface of your car and prevent scratches during installation.
- Please check regularly that all accessories connected with the car are loose to ensure safe use.

Height setting

Raise the tailgate to the ideal height, press the tailgate to install the switch button, 3-5 seconds will appear "beep" a long ring, the handle will release, then press the tailgate button to close, the tailgate will close in place.



cable instruction














components list

Number	Parts name	Quantity	Picture
①	left electric pole	1	
②	right electric pole	1	
③	right lower bracket	1	
④	left lower bracket	1	
⑤	bracket screw	4	
⑥	front switch cable	1	
⑦	punch	1	
⑧	suction lock	1	
⑨	power cable	1	
⑩	tee connection cable tail door button	1	
⑪	control box	1	

installation steps

First, install the bracket and strut

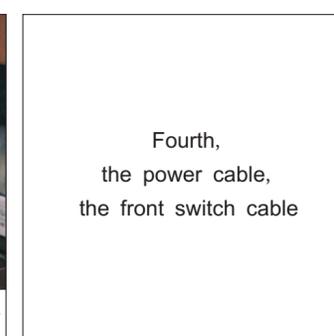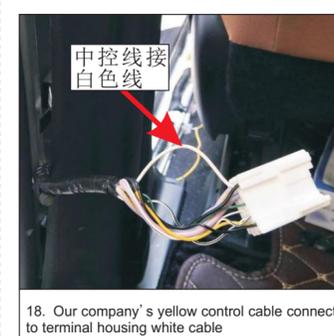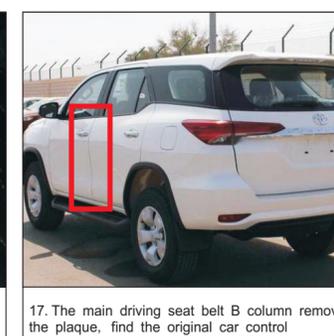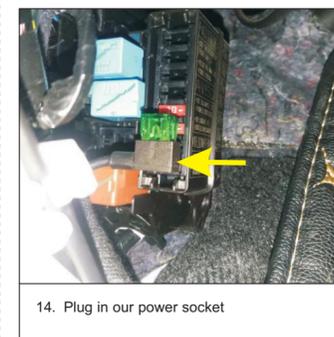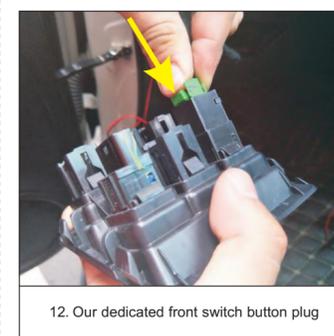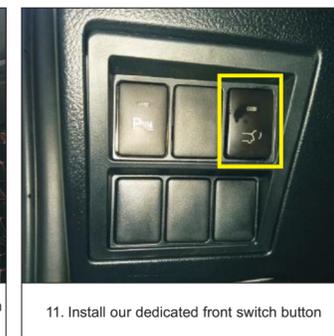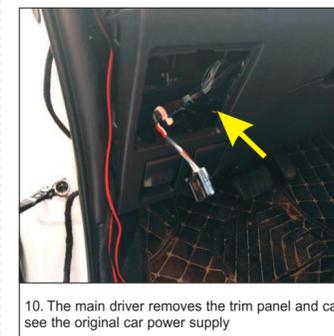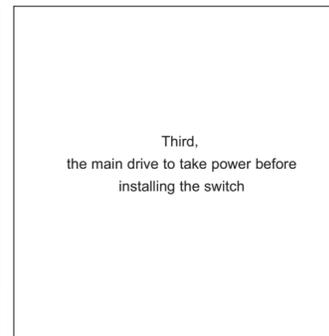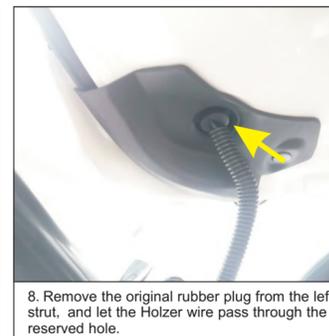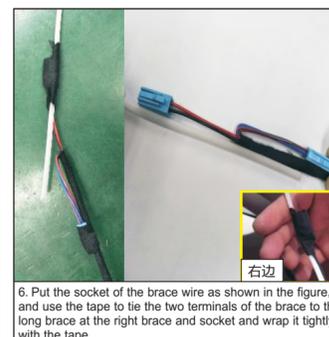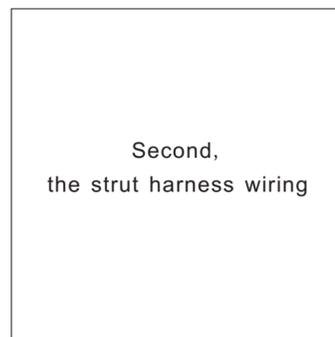

Instructions for use



Press the front switch button to open/close the tailgate



Press the button 3 times on the rear door of the remote control to open/close the rear door



Press the tailgate button to close the door



Original car open door button



Anti-pinch function: 1. Anti-clamping: When the obstacle is under the tailgate closed, when the tailgate is closed, when you encounter an obstacle, you will bounce back in the opposite direction 2. Door collision avoidance: When the obstacle is behind the tailgate Obstacles will bounce back in the opposite direction

! Note: When the door is closed, the sides of the strut part must be heavy, so do not try the side clamp. Damage is not responsible




Tail door height setting

Raise the tailgate to the ideal height, press the tailgate to install the switch button, 3-5 seconds will appear "beep" sound, release the handle, press the tailgate again, The key is off, the tailgate is closed, and then there are two "squeaks", that is, the tailgate is completed.

After the installation is complete, you must set the tailgate learning. Please make sure the door can be turned on and off. Height, press the rear door to install the switch button, 3-5 seconds to hear a long bang, release the handle, click again The tailgate button closes the door, the tailgate closes in place, and then you hear two clicks, that is, the tailgate is completed, if not If you hear "squeaking" two times, your study will be unsuccessful and you will need to learn again. If you do not close the door, use your hand to assist in learning. Push the door tightly

⚡ Before the restoration of the plaque check

33. After installation, please check:
1. Is the screw replaced with a special screw?
 2. Is the screw snaking or playing?
 3. socket is inserted in place
 4. Does the suction lock work?
 5. Whether the harness is damaged or pinched during the wiring process
 6. Whether the remote controller or the main driving switch button can open or close the tailgate

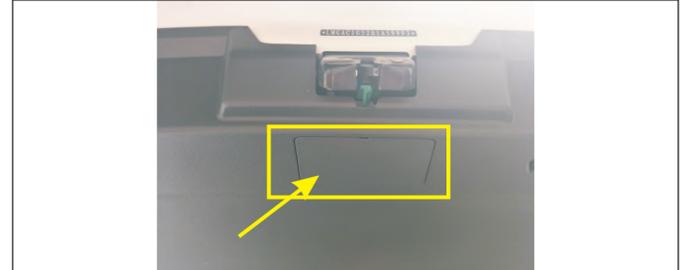

! When the tailgate cannot be opened normally, find the original car emergency safety lock in the trunk and open the emergency cover. Pull emergency switch to open

Frequently asked questions


1. the bracket is installed in reverse: the door is not closed
2. The bracket screws are not replaced as required: the door is not closed properly and the rod is damaged
3. control box connector is not inserted in place, loose: open or close the door without force or force
4. The club head and retainer are not installed: The lever is released during use (check after installation)
5. the connector is not inserted in place, off: functional failure
6. electric suction lock off center: the door is not closed, the door gap is large, tight pull leads to open the door loud
7. the new car is not installed for a long time to start the car caused by electricity: switch door is not normal, need to re-fire
8. More than 5 kg of noise insulation cotton on the tailgate may affect the door opening and closing force
9. need to learn after the first installation or power off: long press to install the back door closing button 3-5 seconds to hear a long sound, then release the handle and then press the door down to hear the "click" 2 sound, learning success (No study will appear abnormal opening and closing doors)
10. When the ball head is not correct, the non-linear ball head can rotate 360°

Fault phenomenon	Troubleshooting method
The original car remote control did not work	Yellow control line is connected
Not working after installation is complete	1. Check whether the positive power supply is connected with 12V-16V 2. Check if the power line fuse is inserted 3. check whether the ground is connected
Guan Wei Men Pass not in place	1. Whether the left and right brackets of the struts are installed in reverse 2. Whether the control box sockets are inserted well 3 whether the bracket is replaced with our special screws 4. There are two vinyl glues on the left and right sides of the original tailgate cover.
The original car remote controller cannot be closed	Whether there is learning after loading, the first time you need to install a car, you need to press the rear door. Press key to learn once
The tailgate can't go halfway up	1. Whether the left and right brackets of the struts are installed in reverse 2. Whether the control box sockets are inserted well 3 whether the bracket is replaced with our special screws Disclaimer

Disclaimer

The related problems and losses caused by improper installation and use are not covered by our company's warranty. Please read this manual carefully before use. Please read it carefully after you read it for future reference. The picture is for reference only and the product shall prevail in kind.


Seven, install the control box

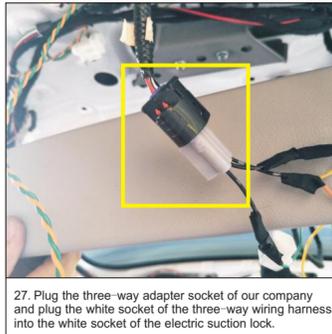


27. Plug the three-way adapter socket of our company and plug the white socket of the three-way wiring harness into the white socket of the electric suction lock.



29. White plug of control box

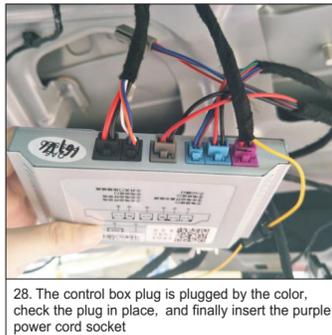


28. The control box plug is plugged by the color, check the plug in place, and finally insert the purple power cord socket

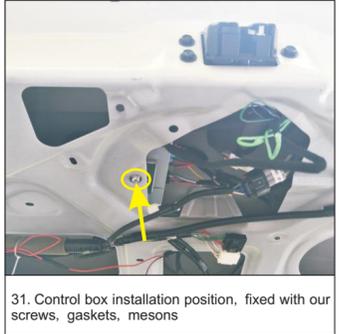

31. Control box installation position, fixed with our screws, gaskets, mesons



30. Use our 3M adhesive on the back of the control box

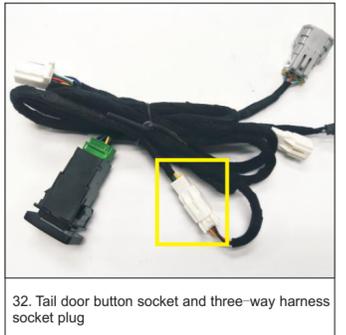


32. Tail door button socket and three-way harness socket plug

Eight, install the tailgate button




20. The main driving power cable, and the central control cable are routed from the top of the vehicle along the yellow arrow to the tailgate cover


Fifth, install the suction lock

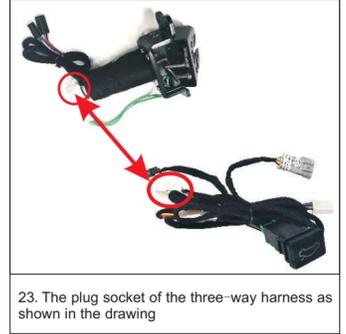

23. The plug socket of the three-way harness as shown in the drawing

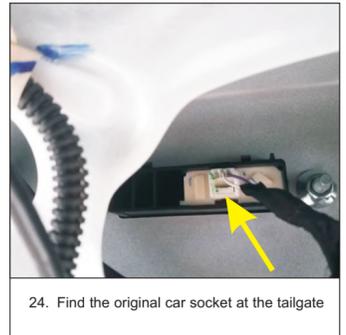


24. Find the original car socket at the tailgate

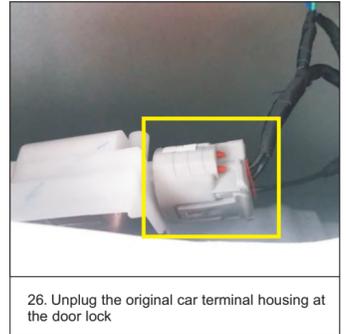

26. Unplug the original car terminal housing at the door lock




21. Fix the wire harness to the original harness and cut out the extra harness with a pliers.

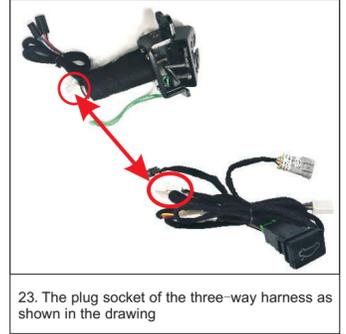

22. Remove the original car screws, remove the original car suction lock, install our electric suction, use the original car screws

Sixth, front switch, three-way plug

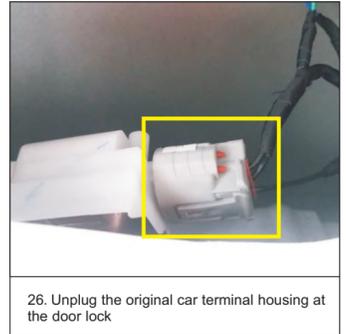


25. Unplug the original car socket plug our front switch adapter



33. Learn the back door and restore the trim (see below for learning methods) ▼



19. The main driving power cable, the front switch cable and the central control cable are routed from the top of the vehicle along the yellow arrow to the tailgate cover

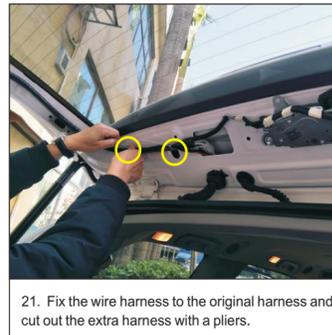

21. Fix the wire harness to the original harness and cut out the extra harness with a pliers.



22. Remove the original car screws, remove the original car suction lock, install our electric suction, use the original car screws

Sixth, front switch, three-way plug



25. Unplug the original car socket plug our front switch adapter