

Eric accent/Odyssey - V4.6 electrical installation instructions

Install and install the product Please read this installation manual carefully

Please keep this manual properly

Installation Precautions

- Before installing the tailgate, check the status of the original tailgate (the door gap is stable)
- Check the appearance of the vehicle before installation to take pictures of the scratches and inform the owner
- After the product is installed, it is necessary to perform tailgate learning to work properly.
- All the pictures in this manual are for reference only. Pictures and objects may differ, but the installation method is the same.
- In order to facilitate your installation, please read the instruction manual of the product carefully before installation; care should be taken to protect the surface of your car and prevent scratches during installation.
- Please check regularly that all accessories connected with the car are loose to ensure safe use.

Height setting


将尾门升至理想高度, 按尾门加装开关按键, 3-5秒出现“嘀”一声长响, 把手松开, 再按一下尾门按键下关, 尾门关到位, 然后出现“嘀嘀”两声, 即尾门学习完成



cable instruction



The suction lock
The left brace
The right brace

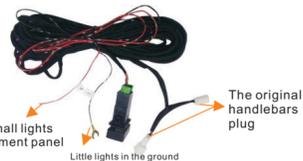

The original handlebars plug
Pick up small lights line instrument panel
Little lights in the ground



The power cord

The tail door keys and tee

components list

编号	配件名称	数量	图片
①	The left brace	1	
②	The right brace	1	
③	Lower left bracket	1	
④	Upper left bracket	1	
⑤	Lower bracket	1	
⑥	At the upper bracket	1	
⑦	Bracket screw	1	
⑧	Before switching line	1	
⑨	The electric absorption	1	
⑩	Lock washer	2	
⑪	The power cord	1	
⑫	Tee, tail door keys	1	
⑬	Control box	1	

installation steps

First, install the bracket and strut



1. As is shown above, with under the cutting board will trim card



2. Remove the original car right bracket, installation of upper bracket, In the original car screws



3. Remove the original car right bracket, installation we lower bracket (ball head toward the outside), with our screws



4. Remove the original car left bracket, installation of upper bracket, In the original car screws



5. Remove the original car bottom bracket, installation we lower left bracket (ball head toward the outside), with our screws



6. The right brace installation is complete


Second, the poles wire line



7. In the upper right legs of punching and poles line go line, tightens the original car waterproof rubber plug (or steps)




8. poles go line to end door cover plate

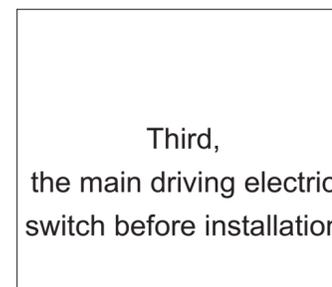

Third, the main driving electric switch before installation



9. The main drive below, find the original car power supply

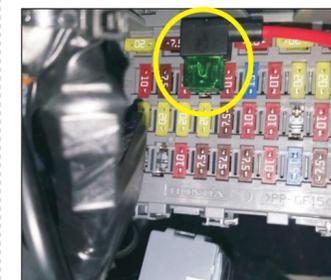

10. Remove the original car fuse, plug in our power plug



11. Screw, connecting our ground plug in our power plug



12. The main driving remove the plaque, remove the original empty car keys, installation before we switch button



13. Remove the plaque to find the original car white socket



14. Before we switch lines to ILL take this seat gray (from left to right for the second hole)


Four, Central Line connection



15. The back wheel on the left side of the lid of the waste footplate, find the original car central control




16. Our yellow Central Line after the saddle yellow line (count from left to right in the third row of the first hole)

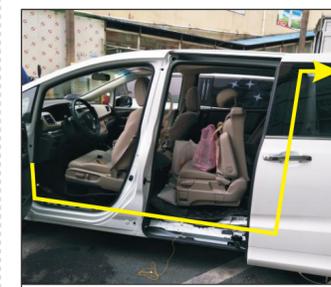

17. The main driving power cord and switch line from the body before walking down the yellow arrow below line to end door cover plate




18. The main drive and control the power cord, switch before walked along the yellow arrow line to end door cover plate

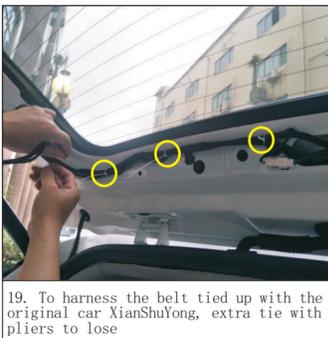


Five,
installed on the lock

19. To harness the belt tied up with the original car XianShuYong, extra tie with pliers to lose

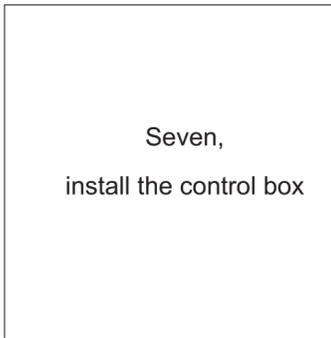

Seven,
install the control box

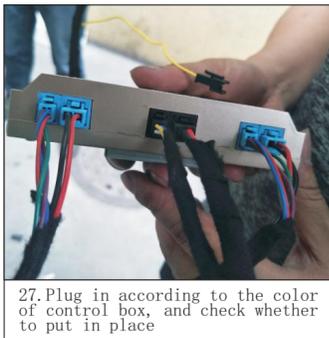

27. Plug in according to the color of control box, and check whether to put in place



34. Study on the tail gate, reducing plaque (study way see below) ▼

Instructions for use




Press the front switch button to open/close the tailgate




Press the remote control unlock button for 3 seconds to open/close the tailgate




20. Remove the screw, remove the original car lock installed ICompany on electricity, use our screws and washers fixed

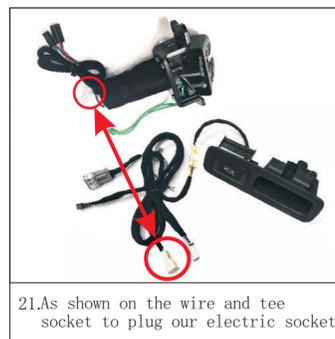

21. As shown on the wire and tee socket to plug our electric socket

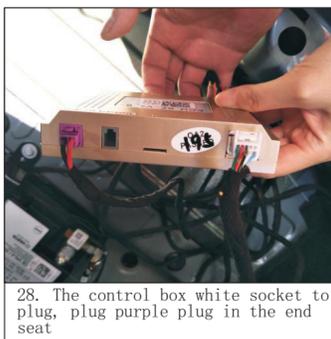


28. The control box white socket to plug, plug purple plug in the end seat

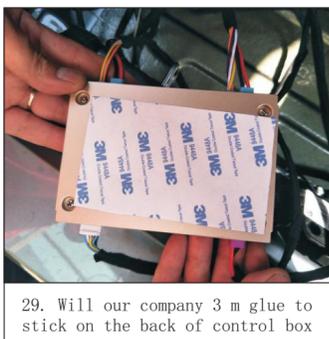

29. Will our company 3 m glue to stick on the back of control box seat

36. Learn the back door and restore the plaque (see below for learning methods) ▼

After the installation is complete, you must set the tailgate learning. Please make sure the door can be turned on and off. Height, press the rear door to install the switch button, 3-5 seconds to hear a long bang, release the handle, click again. The tailgate button closes the door, the tailgate closes in place, and then you hear two clicks, that is, the tailgate is completed, if not. If you hear "squeaking" two times, your study will be unsuccessful and you will need to learn again. If you do not close the door, use your hand to assist in learning. Push the door tightly

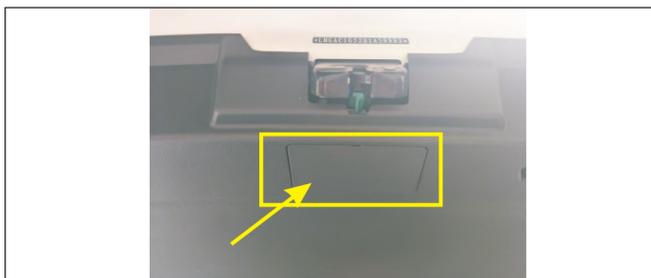


! When the tailgate cannot be opened normally, find the original car emergency safety lock in the trunk and open the emergency cover. Pull emergency switch to open




Press the tailgate button to close the door



Original car open door button

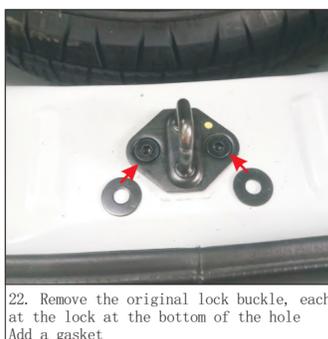

22. Remove the original lock buckle, each at the lock at the bottom of the hole. Add a gasket

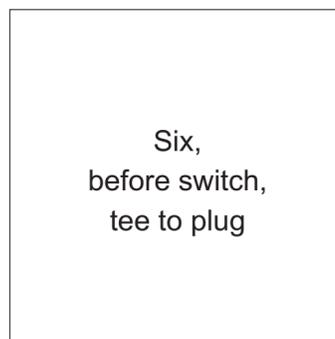

Six,
before switch,
tee to plug



30. Installation position and control box, with our screw, gaskets, meson



Eight,
install the tail door keys


Frequently asked questions

1. the bracket is installed in reverse: the door is not closed
2. The bracket screws are not replaced as required: the door is not closed properly and the rod is damaged
3. control box connector is not inserted in place, loose: open or close the door without force or force
4. The club head and retainer are not installed: The lever is released during use (check after installation)
5. the connector is not inserted in place, off: functional failure
6. electric suction lock off center: the door is not closed, the door gap is large, tight pull leads to open the door loud
7. the new car is not installed for a long time to start the car caused by electricity: switch door is not normal, need to re-fire
8. More than 5 kg of noise insulation cotton on the tailgate may affect the door opening and closing force
9. need to learn after the first installation or power off: long press to install the back door closing button 3-5 seconds to hear a long sound, then release the handle and then press the door down to hear the "click" 2 sound, learning success (No study will appear abnormal opening and closing doors)
10. When the ball head is not correct, the non-linear ball head can rotate 360°



Anti-pinch function: 1. Anti-clamping: When the obstacle is under the tailgate closed, when the tailgate is closed, when you encounter an obstacle, you will bounce back in the opposite direction. 2. Door collision avoidance: When the obstacle is behind the tailgate, Obstacles will bounce back in the opposite direction

! Note: When the door is closed, the sides of the strut part must be heavy, so do not try the side clamp. Damage is not responsible

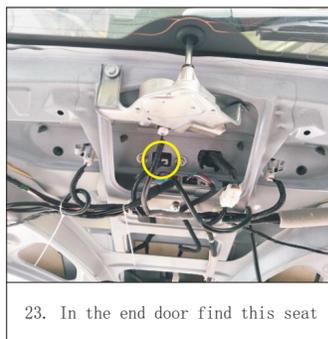

23. In the end door find this seat



24. Remove the original car to plug before our company transfer switch plug socket seat



31. Remove the original car trim, installed special door keys




32. The tail door keys with the wire and tee socket to plug socket


Fault phenomenon	Troubleshooting method
The original car remote control did not work	Yellow control line is connected
Not working after installation is complete	1. Check whether the positive power supply is connected with 12V-16V 2. Check if the power line fuse is inserted 3. check whether the ground is connected
Guan Wei Men Pass not in place	1. Whether the left and right brackets of the struts are installed in reverse 2. Whether the control box sockets are inserted well 3 whether the bracket is replaced with our special screws 4. There are two vinyl glues on the left and right sides of the original tailgate cover.
The original car remote controller cannot be closed	Whether there is learning after loading, the first time you need to install a car, you need to press the rear door. Press key to learn once
The tailgate can't go halfway up	1. Whether the left and right brackets of the struts are installed in reverse 2. Whether the control box sockets are inserted well 3 whether the bracket is replaced with our special screws Disclaimer



Tail door height setting
Raise the tailgate to the ideal height, press the tailgate to install the switch button, 3-5 seconds will appear "beep" sound, release the handle, press the tailgate again, The key is off, the tailgate is closed, and then there are two "squeaks", that is, the tailgate is completed.

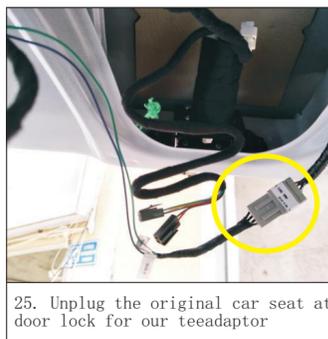

25. Unplug the original car seat at door lock for our teadaptor

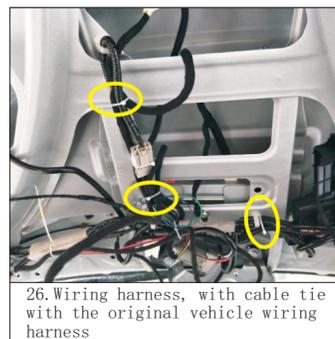

26. Wiring harness, with cable tie with the original vehicle wiring harness

⚡

饰板还原前要点检查

33. 安装完毕后, 请检查:

1. 螺丝是否全部换成专用螺丝
2. 螺丝是否有打歪、打斜
3. 插座是否插到位
4. 电吸锁是否工作
5. 线束在走线过程中线束是否有损伤、夹伤
6. 遥控器、主驾驶前开关按键是否能开启或关闭尾门

Disclaimer

The related problems and losses caused by improper installation and use are not covered by our company's warranty. Please read this manual carefully before use. Please read it carefully after you read it for future reference. The picture is for reference only and the product shall prevail in kind.